

AlphaRiverTrackPilot – warnings and alarms

(Re-)Start the AIS.If the warning does not disappear by itself, contact support.

AIS: Error - Contact support

Warning Name	Action	Alarm Name	Action
Close to end of track	Switch to manual steering Choose new guiding line	Track too far away	Switch to manual steering Check if the correct guiding line has been chosen Choose another line closer to the current position
Position inaccurate	Wait for the warning to disappear If EstimationDegraded error comes up switch to manual steering	End of track reached	Immediately switch to manual steering Choose new guiding line
Distance to track large	Check if the autopilot system processes the commands by the track control system Acknowledge warning	Turn too sharp	Switch to manual steering
GPS (2): No position received	Acknowledge warning Closely monitor track control system for correct operation	• Choose ne	Check guiding line for errors (points very close together) Choose new guiding line
	Increase attentionWait if data comes backotherwise switch to manual steering	Rudder change too large	 Acknowledge alarm by switching to manual steering. Wait until state of track control system returns to "READY". Check in ECDIS if ship position on map and reality match. Switch on track control system Increase attention Acknowledge alarm by switching to manual steering. There is no other way to acknowledge the alarm. Wait until state of track control system returns to "READY". Check in ECDIS if ship position on map and reality match. Switch on track control system Increase attention
GPS (2): No velocity received	 Acknowledge warning and closely monitor track control system for correct operation Error persists after 10 minutes? ➡ Contact support, if nec. switch to manual steering 		
GPS (2): No heading received	 Acknowledge warning and closely monitor track control system for correct operation Error persists after 10 minutes? → Contact support, if nec. switch to manual steering 	Position unusable	
Velocity low	Increase velocity Acknowledge warning		
Dead man warning	Move Track or click any button on the touch display	Dead man alarm	Acknowledge alarm by switching to manual steering. Activate TrackPilot mode again
Target close	Decrease velocity or deactivate TargetPilot or select different target	Target too close	Acknowledge alarm Continue manually and increase distance to AIS target or deactivate TargetPilot
Target lost	Closely monitor track control system for correct operation		
AIS: No data received	TargetPilot active? Closely monitor track control system for correct operation Malfunction of AIS? immediately deactivate TargetPilot	Target lost	Acknowledge alarm by switching to manual steering. There is no other way to acknowledge the alarm.
Collision ahead	Move current track Wait until the ship has reached the shifted line	Collision ahead	 Continue manually and select new AIS target or deactivate TargetPilot Acknowledge alarm by switching to manual steering. There is no other way to acknowledge the alarm. Continue to steer manually and avoid collision In case of false alarm, check the setting of the argoLaneWarning
Power supply connected incorrectly	Contact dealer/installer		
TrackPilot switched off	Activate TrackPilot again if requiredCheck correct function of all devices	Autopilot connection lost	Switch off immediately Check correct function of all devices Contact customer support
End of SafetyContour ahead	Select new safety corridor		
PS/SB limit violated	Move the track to keep the planned path within the safety corridor	I/O: Error - Contact support	Switch off immediately Check correct function of all devices Contact customer support
No ROT received	 Check the correct function of all devices. If this warning does not disappear by itself, contact support.	System error 001/002/003 -	Switch off immediately
ECDIS / Alphatron Display: connection lost	(Re-)Start the ECDIS / Alphatron Display.If this warning does not disappear by itself, contact support.	Contact support	Contact customer support