

## AlphaRiverTrackPilot – warnings and alarms

Strong cross current detected

Increase attention

Warning Name	Action	Alarm Name	Action
Close to end of track	Switch to manual steering     Choose new guiding line	Track too far away	Switch to manual steering     Check if the correct guiding line has been chosen
Position inaccurate	<ul><li>Wait for the warning to disappear</li><li>If EstimationDegraded error comes up switch to manual steering</li></ul>	End of track reached: Take	Choose another line closer to the current position     Immediately switch to manual steering
Distance to track large	Check if the autopilot system processes the commands by the track control system     Acknowledge warning		<ul> <li>Choose new guiding line</li> <li>Switch to manual steering</li> </ul>
GPS (2): No position received	Acknowledge warning     Closely monitor track control system for correct operation		Check guiding line for errors (points very close together)     Choose new guiding line
	<ul><li>Increase attention</li><li>Wait if data comes back</li><li>otherwise switch to manual steering</li></ul>	Take control	<ul> <li>Acknowledge alarm by switching to manual steering.</li> <li>Wait until state of track control system returns to "READY".</li> <li>Check in ECDIS if ship position on map and reality match.</li> <li>Switch on track control system</li> <li>Increase attention</li> </ul>
GPS (2): No velocity received	<ul> <li>Acknowledge warning and closely monitor track control system for correct operation</li> <li>Error persists after 10 minutes? → Contact support, if nec. switch to manual steering</li> </ul>		
GPS (2): No heading received	<ul> <li>Acknowledge warning and closely monitor track control system for correct operation</li> <li>Error persists after 10 minutes? ➡ Contact support, if nec. switch to manual steering</li> </ul>	Position unusable: Take control	<ul> <li>Acknowledge alarm by switching to manual steering. There is no other way to acknowledge the alarm.</li> <li>Wait until state of track control system returns to "READY".</li> <li>Check in ECDIS if ship position on map and reality match.</li> <li>Switch on track control system</li> <li>Increase attention</li> </ul>
Velocity low	Increase velocity     Acknowledge warning		
Watch alarm: Activity required	Move Track or click any button on the touch display	Watch alarm: Take control	Acknowledge alarm by switching to manual steering.     Activate Trackpilot mode again
Target close	Decrease velocity or deactivate TargetPilot or select different target		
Target lost	Closely monitor track control system for correct operation	Target too close: Take control  Target lost: Take control	<ul> <li>Acknowledge alarm</li> <li>Continue manually and increase distance to AIS target or deactivate TargetPilot</li> <li>Acknowledge alarm by switching to manual steering. There is no other way to acknowledge the alarm.</li> <li>Continue manually and select new AIS target or deactivate TargetPilot</li> </ul>
AIS: No data received	<ul> <li>TargetPilot active?   Closely monitor track control system for correct operation Malfunction of AIS?   immediately deactivate TargetPilot</li> </ul>		
Collision ahead	Move current track     Wait until the ship has reached the shifted line		
Power supply connected incorrectly	Contact dealer/installer	Collision ahead: Take control  Autopilot connection lost: Take control	<ul> <li>Acknowledge alarm by switching to manual steering. There is no other way to acknowledge the alarm.</li> <li>Continue to steer manually and avoid collision</li> <li>In case of false alarm, check the setting of the argoLaneWarning</li> <li>Switch off immediately</li> <li>Check correct function of all devices</li> <li>Contact customer support</li> </ul>
Trackpilot switched off	<ul><li>Activate Trackpilot again if required</li><li>Check correct function of all devices</li></ul>		
End of SafetyContour ahead	Select new safety corridor		
Left/Right limit violated	Move the track to keep the planned path within the safety corridor		
No ROT received	<ul><li>Check the correct function of all devices.</li><li>If this warning does not disappear by itself, contact support.</li></ul>	I/O: Error - Contact support	<ul><li>Switch off immediately</li><li>Check correct function of all devices</li><li>Contact customer support</li></ul>
ECDIS / Alphatron Display: connection lost	<ul><li>(Re-)Start the ECDIS / Alphatron Display.</li><li>If this warning does not disappear by itself, contact support.</li></ul>	System Error 001/002/003 - Contact support	Switch off immediately     Contact customer support
AIS: Error - Contact support	<ul><li>(Re-)Start the AIS.</li><li>If the warning does not disappear by itself, contact support.</li></ul>		