



AlphaRiverTrackPilot – quick start guide

Preparation


1. Choose track from ECDIS or in TrackPilot

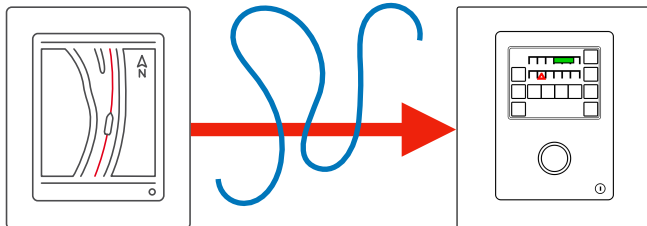

 2. Choose profile



3. Set stream velocity and direction

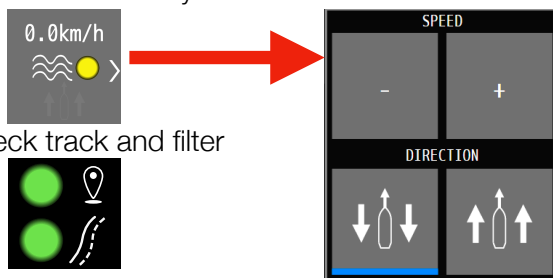


4. Check track and filter




5. Turn on trackpilot mode

Oscillations ! Check stream settings

Oscillations around guiding line

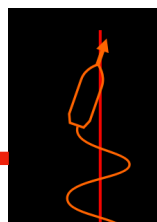



Lower „controller gain“

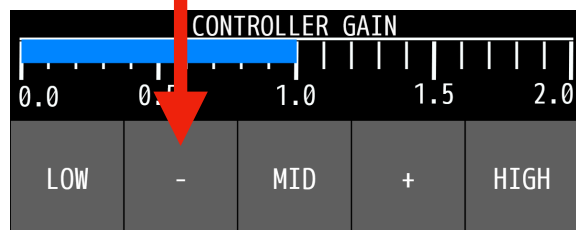

Test for a few minutes and adjust further if necessary

Permanent track deviation ! Check stream settings

Permanent track deviation

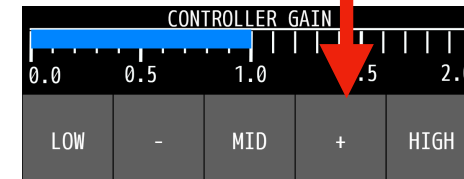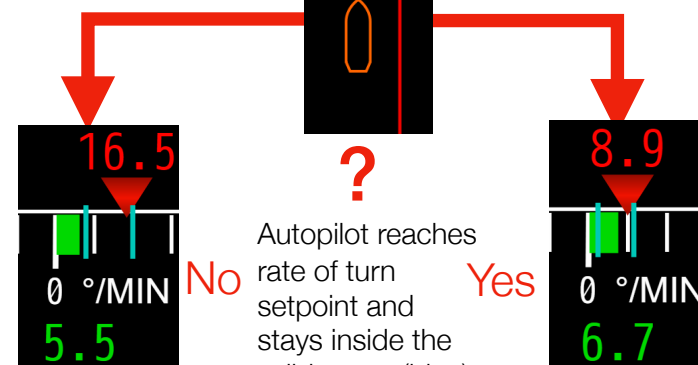


1. Increase „rudder“ on autopilot
2. Increase „controller gain“ on TrackPilot
3. Check rate of turn signal


Deviation in curves

! Check stream settings

Too far on inside of curve Too far on outside of curve

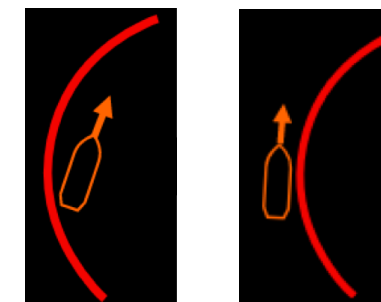

Adjust drift gain

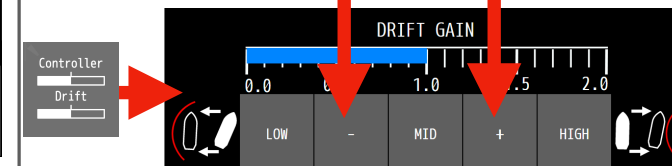


Test for a few minutes and adjust further if necessary

Miscellaneous

Check system version



Open access for remote support

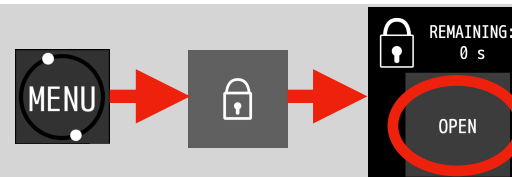


Restart TrackPilot


Variant A)



Variant B)

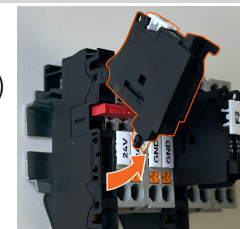

Setup watch alarm

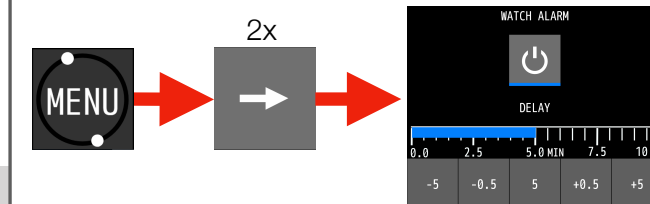

Download manual



ALPHATRON Marine

powered by argonics
an Alpatron Marine company

AlphaRiverTrackPilot – warnings and alarms

Warning Name	Action	Alarm Name	Action
AIS: Error - Contact support	• (Re-)Start the AIS. • If the warning does not disappear by itself, contact support.	Autopilot connection lost: Take control	• Switch off immediately • Check correct function of all devices • Contact customer support
AIS: No data received	• TargetPilot active? ➡ Closely monitor track control system for correct operation • Malfunction of AIS? ➡ immediately deactivate TargetPilot	Collision ahead: Take control	• Acknowledge alarm by switching to manual steering. There is no other way to acknowledge the alarm. • Continue to steer manually and avoid collision • In case of false alarm, check the setting of the argoLaneWarning
Close to end of track	• Switch to manual steering • Choose new guiding line	End of track reached: Take control	• Immediately switch to manual steering • Choose new guiding line
Collision ahead	• Move current track • Wait until the ship has reached the shifted line	I/O: Error - Contact support	• Switch off immediately • Check correct function of all devices • Contact customer support
Distance to track large	• Check if the autopilot system processes the commands by the track control system • Acknowledge warning	Lock warning: Take control	• Acknowledge alarm. Can only be done by deactivating the Trackpilot. • Continue manually.
ECDIS / Alphanon Display: connection lost	• (Re-)Start the ECDIS / Alphanon Display. • If this warning does not disappear by itself, contact support.	Position unusable: Take control	• Acknowledge alarm by switching to manual steering. There is no other way to acknowledge the alarm. • Wait until state of track control system returns to „READY“. • Check in ECDIS if ship position on map and reality match. • Switch on track control system • Increase attention
End of SafetyContour ahead	• Select new safety corridor	Rudder change too large: Take control	• Acknowledge alarm by switching to manual steering. • Wait until state of track control system returns to „READY“. • Check in ECDIS if ship position on map and reality match. • Switch on track control system • Increase attention
GPS (2): No heading received	• Acknowledge warning and closely monitor track control system for correct operation • Error persists after 10 minutes? ➡ Contact support, if nec. switch to manual steering	System Error 001/002/003 - Contact support	• Switch off immediately • Contact customer support
GPS (2): No position received	• Acknowledge warning • Closely monitor track control system for correct operation • Increase attention • Wait if data comes back • otherwise switch to manual steering	Target lost: Take control	• Acknowledge alarm by switching to manual steering. There is no other way to acknowledge the alarm. • Continue manually and select new AIS target or deactivate TargetPilot
GPS (2): No velocity received	• Acknowledge warning and closely monitor track control system for correct operation • Error persists after 10 minutes? ➡ Contact support, if nec. switch to manual steering	Target too close: Take control	• Acknowledge alarm • Continue manually and increase distance to AIS target or deactivate TargetPilot
Left/Right limit violated	• Move the track to keep the planned path within the safety corridor	Track too far away	• Switch to manual steering • Check if the correct guiding line has been chosen • Choose another line closer to the current position
Lock warning	• Pay close attention and adjust speed if necessary.	Turn too sharp: Take control	• Switch to manual steering • Check guiding line for errors (points very close together) • Choose new guiding line
Lock warning not available	• Contact customer service.	Watch alarm: Take control	• Acknowledge alarm by switching to manual steering. • Activate Trackpilot mode again
No internet – contact support	• Restart the argoRouter. • If the problem persists after one hour, contact customer support.		
No ROT received	• Check the correct function of all devices. • If this warning does not disappear by itself, contact support.		
Position inaccurate	• Wait for the warning to disappear • If EstimationDegraded error comes up switch to manual steering		
Power supply connected incorrectly	• Contact dealer/installer		
Strong cross current detected	• Increase attention		
Target close	• Decrease velocity or deactivate TargetPilot or select different target		
Target lost	• Closely monitor track control system for correct operation		
Trackpilot switched off	• Activate Trackpilot again if required • Check correct function of all devices		
Velocity low	• Increase velocity • Acknowledge warning		
Watch alarm: Activity required	• Move Track or click any button on the touch display		